


RADIKAL G20 SPRAG AUTO UNIT ASSEMBLY DIAGRAM

v. 1.00

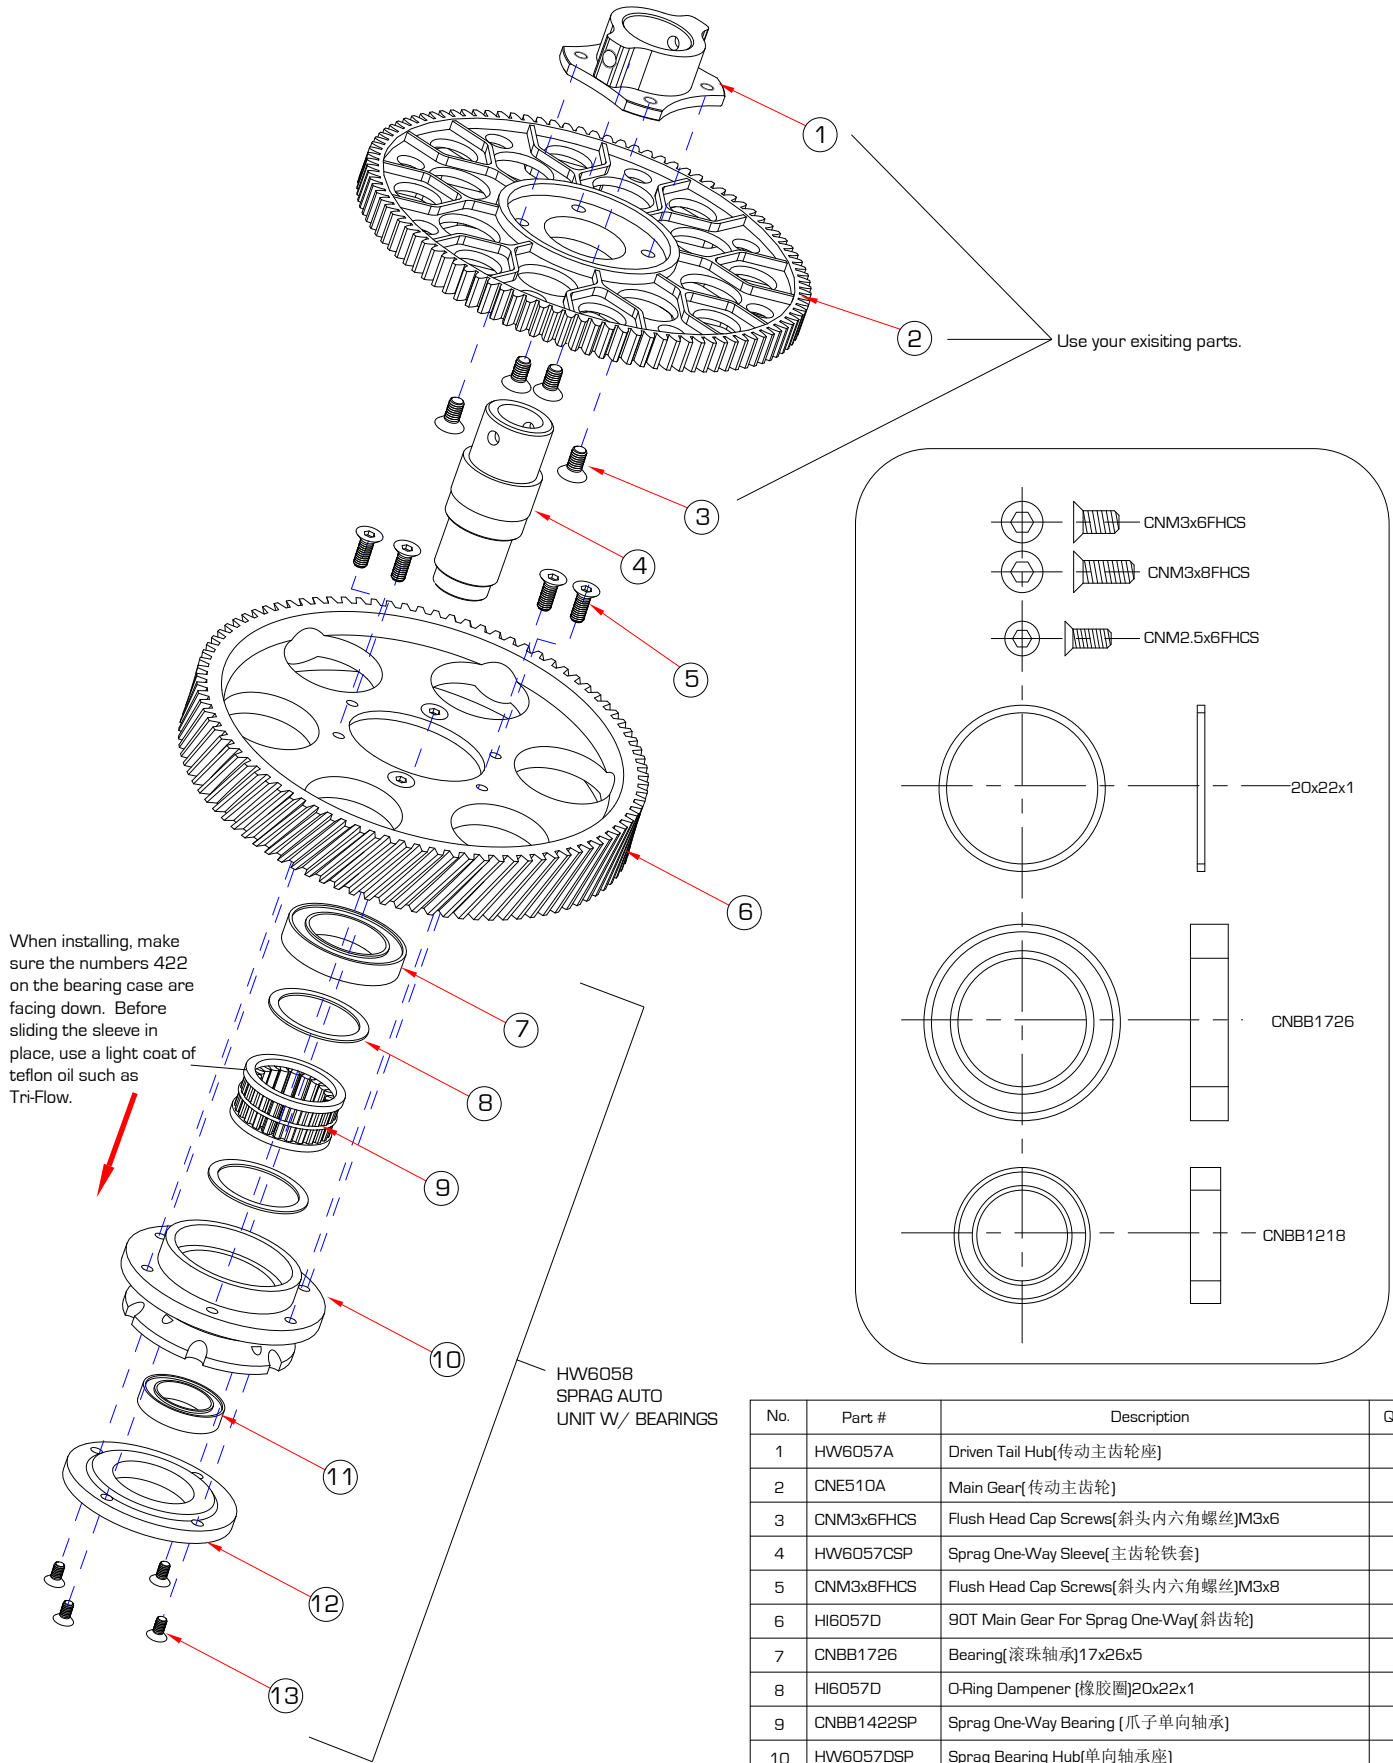

When installing, make sure the numbers 422 on the bearing case are facing down. Before sliding the sleeve in place, use a light coat of teflon oil such as Tri-Flow.

HW6058
SPRAG AUTO
UNIT W/ BEARINGS

No.	Part #	Description	Qty
1	HW6057A	Driven Tail Hub(传动主齿轮座)	1
2	CNE510A	Main Gear(传动主齿轮)	1
3	CNM3x6FHCS	Flush Head Cap Screws(斜头内六角螺丝)M3x6	4
4	HW6057CSP	Sprag One-Way Sleeve(主齿轮铁套)	1
5	CNM3x8FHCS	Flush Head Cap Screws(斜头内六角螺丝)M3x8	6
6	HI6057D	90T Main Gear For Sprag One-Way(斜齿轮)	1
7	CNBB1726	Bearing(滚珠轴承)17x26x5	1
8	HI6057D	O-Ring Dampener(橡胶圈)20x22x1	2
9	CNBB1422SP	Sprag One-Way Bearing(爪子单向轴承)	1
10	HW6057DSP	Sprag Bearing Hub(单向轴承座)	1
11	CNBB1218	Bearing(滚珠轴承)12x18x4	1
12	HW6057DSP	Bearing Hub Cover(轴承座后盖)	1
13	CNM2.5x6FHCS	Flush Head Cap Screws(斜头内六角螺丝)M2.5x6	4